





PSD450mkII

Direct to CD Recording

1. Insert a blank CD-R/RW into the slot of the CD drive. Wait 15 seconds for the CDR disc to be initialized.

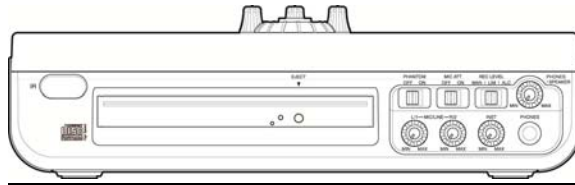


2. Press the RECORD SETTINGS button to choose an input source and media destination.

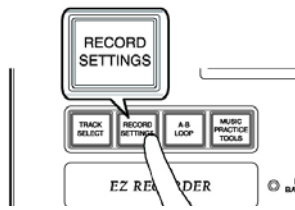


3. From the RECORD SETTINGS screen, use the grey joystick to highlight (blue bar) Input Source and press the grey joystick down (PUSH ENTER) to reveal the Input Source options. Rotate Function Adjust Knob #1 (see below) to the desired input source, e.g., Internal MIC, External MIC. Press the grey joystick down to enter the selection. Input Source will display the selected input source on the RECORD SETTINGS screen.

Record Setting Screen

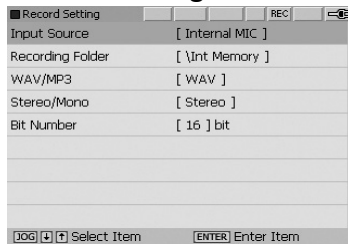

Function Adjust, Jog Wheel & Joy Stick

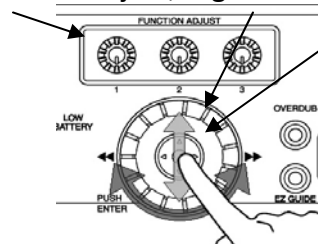

4. From the RECORD SETTINGS screen, use the grey joystick to highlight (blue bar) Recording Folder option and press the grey joystick down (PUSH ENTER). Rotate the jog wheel to highlight [Return] option and press the grey joystick down (PUSH ENTER). The Device Select Menu will appear displaying [Int Memory] and [CDR].

Superscope Technologies, Inc.

1508 Batavia Avenue • Geneva, IL • 60134

Phone: 630-232-8900 • Fax: 630-232-8905

www.superscopetechnologies.com



Device Select Menu

| Folder Name | | |
|-------------|--------------|--------|
| No. | Name | Length |
| | [INT MEMORY] | |
| | [CDR] | |
| | | |
| | | |
| | | |
| | | |
| | | |

[JOG] [↓] [↑] Scroll [ENTER] Select [←] [→] Select Mode

5. Rotate the jog wheel and highlight [CDR] and press the grey joystick down (PUSH ENTER). Rotate the jog wheel and highlight [Current Folder] press the grey joystick down (PUSH ENTER). Recording Folder [\CDR] will be displayed indicating CD-R as the recording selection.

Device Select Menu

| Folder Name | | |
|-------------|--------------|--------|
| No. | Name | Length |
| | [INT MEMORY] | |
| | [CDR] | |
| | | |
| | | |
| | | |
| | | |
| | | |

[JOG] [↓] [↑] Scroll [ENTER] Select [←] [→] Select Mode


Device Select Menu

| Folder Name | | |
|-------------|------------------|--------|
| No. | Name | Length |
| | [RETURN] | |
| | [CURRENT FOLDER] | |
| | | |
| | | |
| | | |
| | | |
| | | |

[JOG] [↓] [↑] Scroll [ENTER] Select [←] [→] Select Mode

6. Press the RECORD SETTINGS button to return to the main menu. When using internal or external microphones, a record level must be set. For manual setting of the record levels, slide the REC LEVEL switch to MAN (located on the front panel, right-hand side of the unit). Adjust the MIC/LINE level controls (L/1 & R/2) in conjunction with the LCD record level meters in the display to the desired record level. To set the record levels automatically, slide the REC LEVEL switch to ALC (Automatic Level Control), bypassing the manual record level controls.

Record Level Adjust and Manual/Limiter/ALC Controls

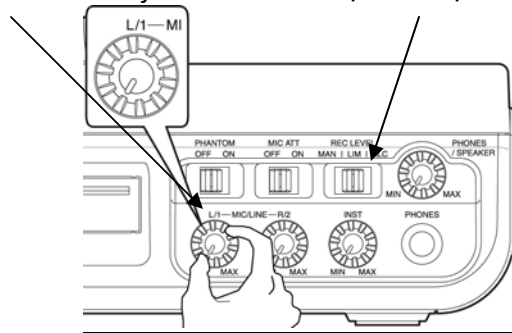

Superscope Technologies, Inc.

1508 Batavia Avenue • Geneva, IL • 60134


Phone: 630-232-8900 • Fax: 630-232-8905

www.superscopetechnologies.com




7. Press the REC button on top of the unit. The REC button will flash red indicating the unit is in record/pause and CDR disc will whir as it prepares for recording. Speak towards microphones and confirm green (VU Meters) bars on the bottom of the display move when audio is present. Press the REC button again to begin recording. Press PLAY/PAUSE to pause the recording. Press the REC button to resume recording. Press STOP to end recording.

Record/Play/Pause/Stop Buttons

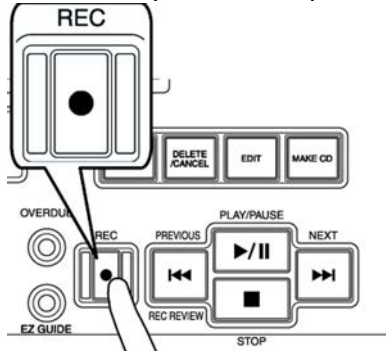


CDR Record Home with VU/Level Meters

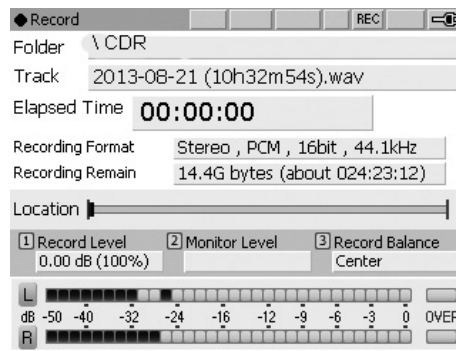

CDR/CD-RW Finalization

Once you have completed all desired recordings on the CDR or CD-RW **you must finalize** the disc in order to play a CDR or CD-RW on standard CD players. To convert the disc from recordable to a CD Audio playback disc follow these steps.

1. While the disc is still in the CDR drive, press the Make CD button.

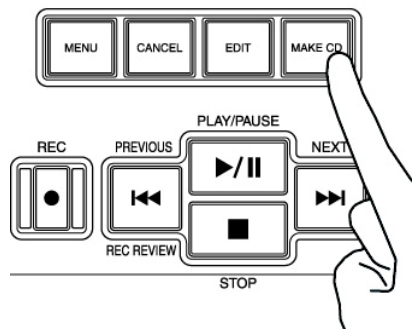

2. From the Make CD Menu use the jog wheel to highlight the Finalize option and press the grey joystick down (PUSH ENTER).


Make CD Home Menu

Superscope Technologies, Inc.

1508 Batavia Avenue • Geneva, IL • 60134


Phone: 630-232-8900 • Fax: 630-232-8905

www.superscopetechnologies.com

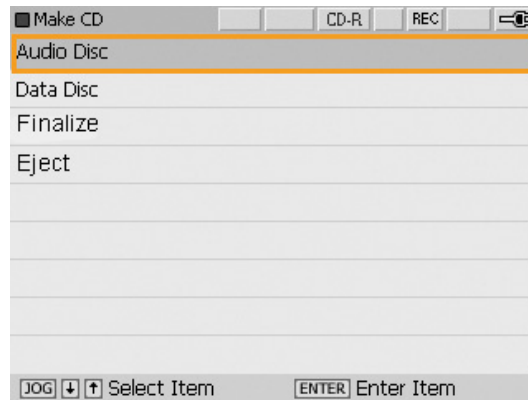


3. From the Finalize menu use the grey joystick to highlight the box marked OK and press the grey joystick down (PUSH ENTER).

Finalize Menu

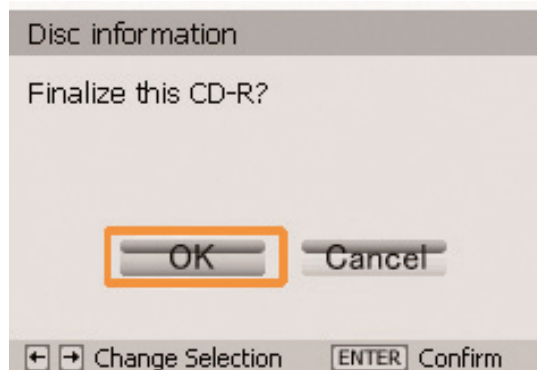

4. The display will change to show the finalize progress.

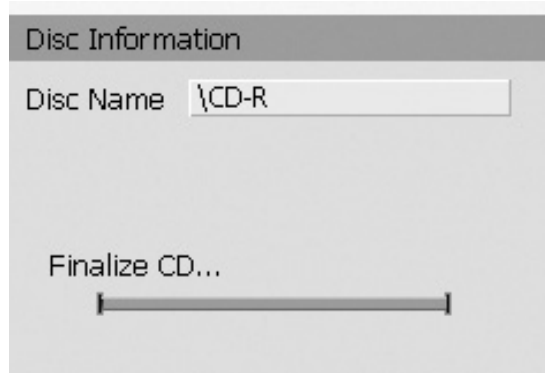

5. Once the finalize process has completed the display will go back to the main menu display and the disc can be ejected from the CDR drive. Note: once a CDR disc has been finalized you can no longer record on this disc.

Superscope Technologies, Inc.

1508 Batavia Avenue • Geneva, IL • 60134

Phone: 630-232-8900 • Fax: 630-232-8905

www.superscopetechnologies.com